


SINGER

DSX

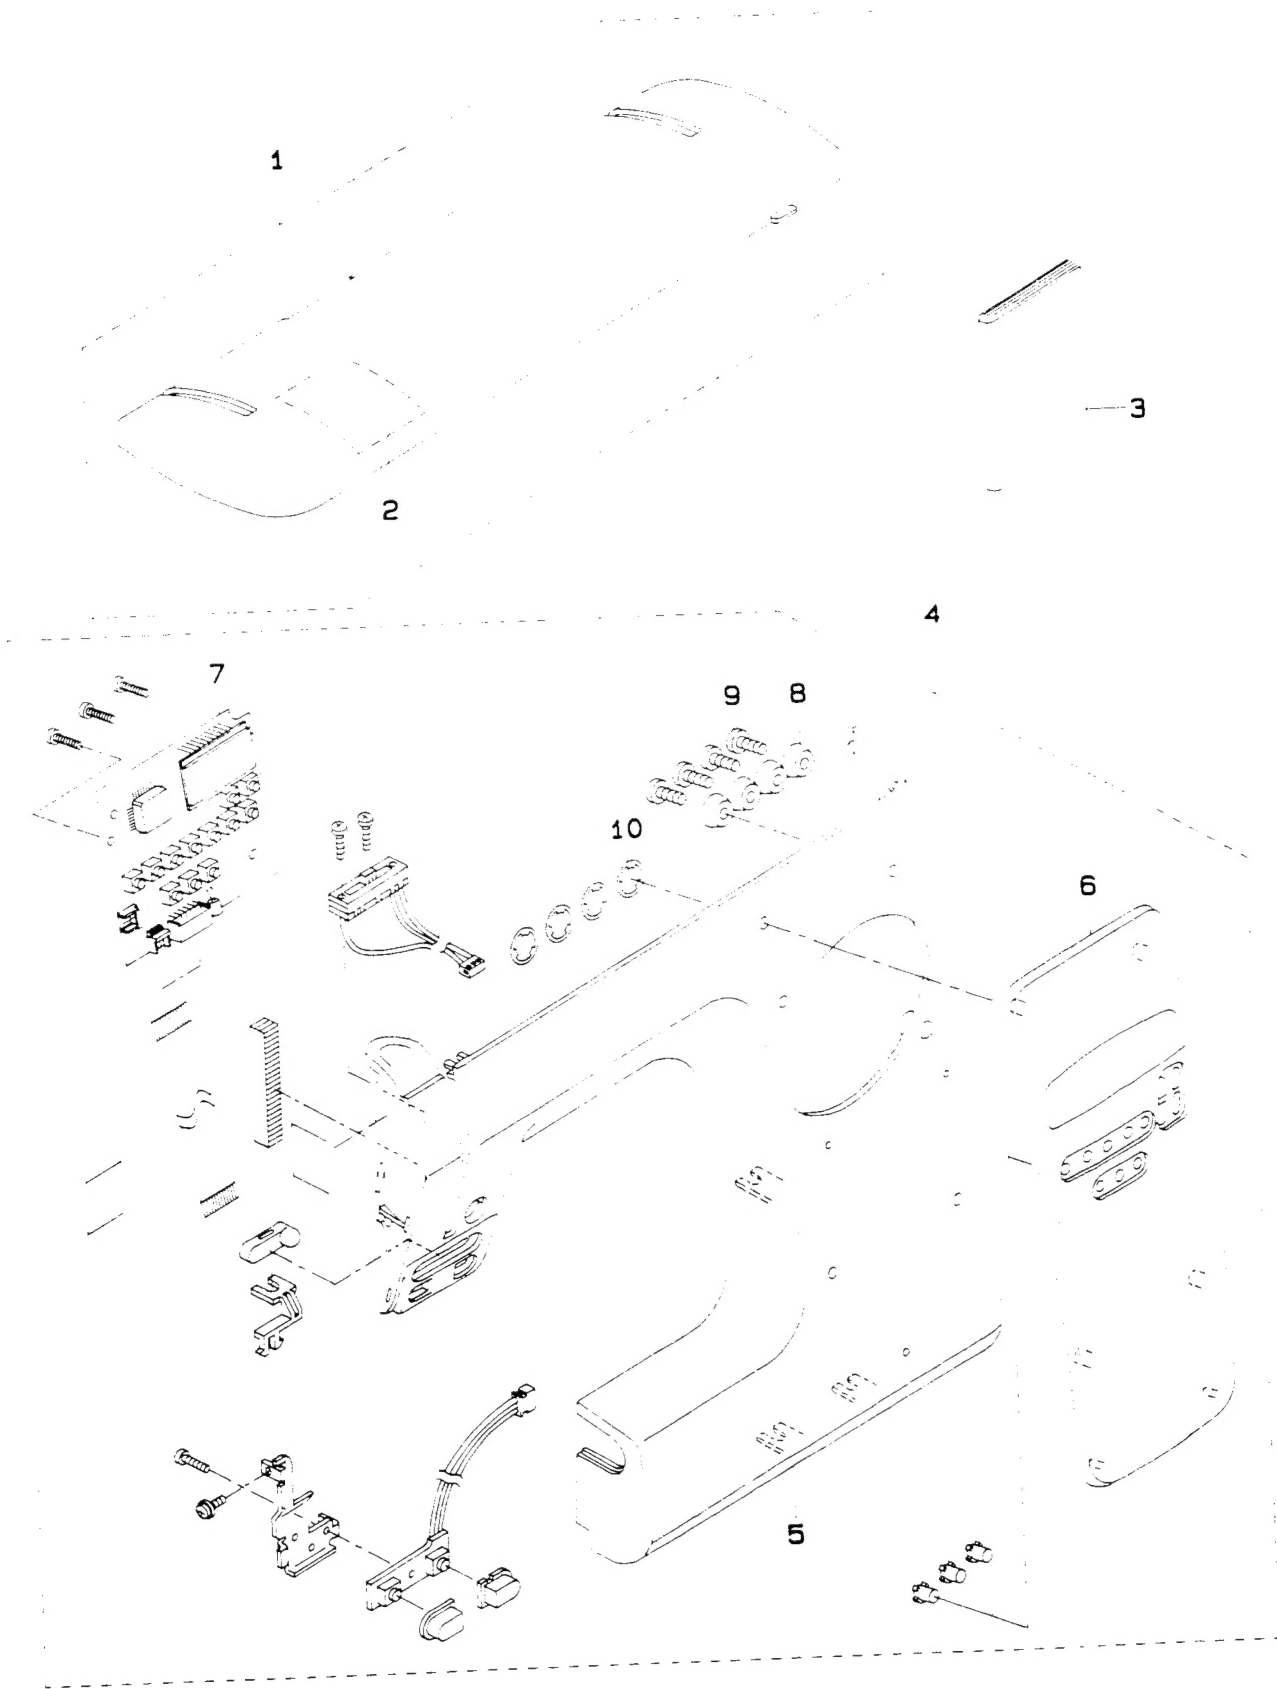

| Ref | No. | Note | Part No. | Part Description | Qty |
|-----|-----|------|----------|--------------------------------|-----|
| | 1 | | 385367 | Upper cover (asm.) | 1 |
| | 2 | | 385368 | Thread winding label | (1) |
| | 3 | | 385363 | Instruction manual | 1 |
| | 4 | | 385369 | Front panel (asm.) | 1 |
| | 5 | | 385370 | Front panel | (1) |
| | 6 | | 385371 | Pattern disply panel (asm.) | (1) |
| | 7 | | 385372 | Indicator circuit board (asm.) | (1) |
| | 8 | | 385373 | Collar | (4) |
| | 9 | | 283522 | Screw | (4) |
| | 10 | | 283334 | Push nut | (4) |

★ REFER TO THE LE/SX PARTS LIST FOR
PARTS NOT INCLUDED IN THIS LIST.